


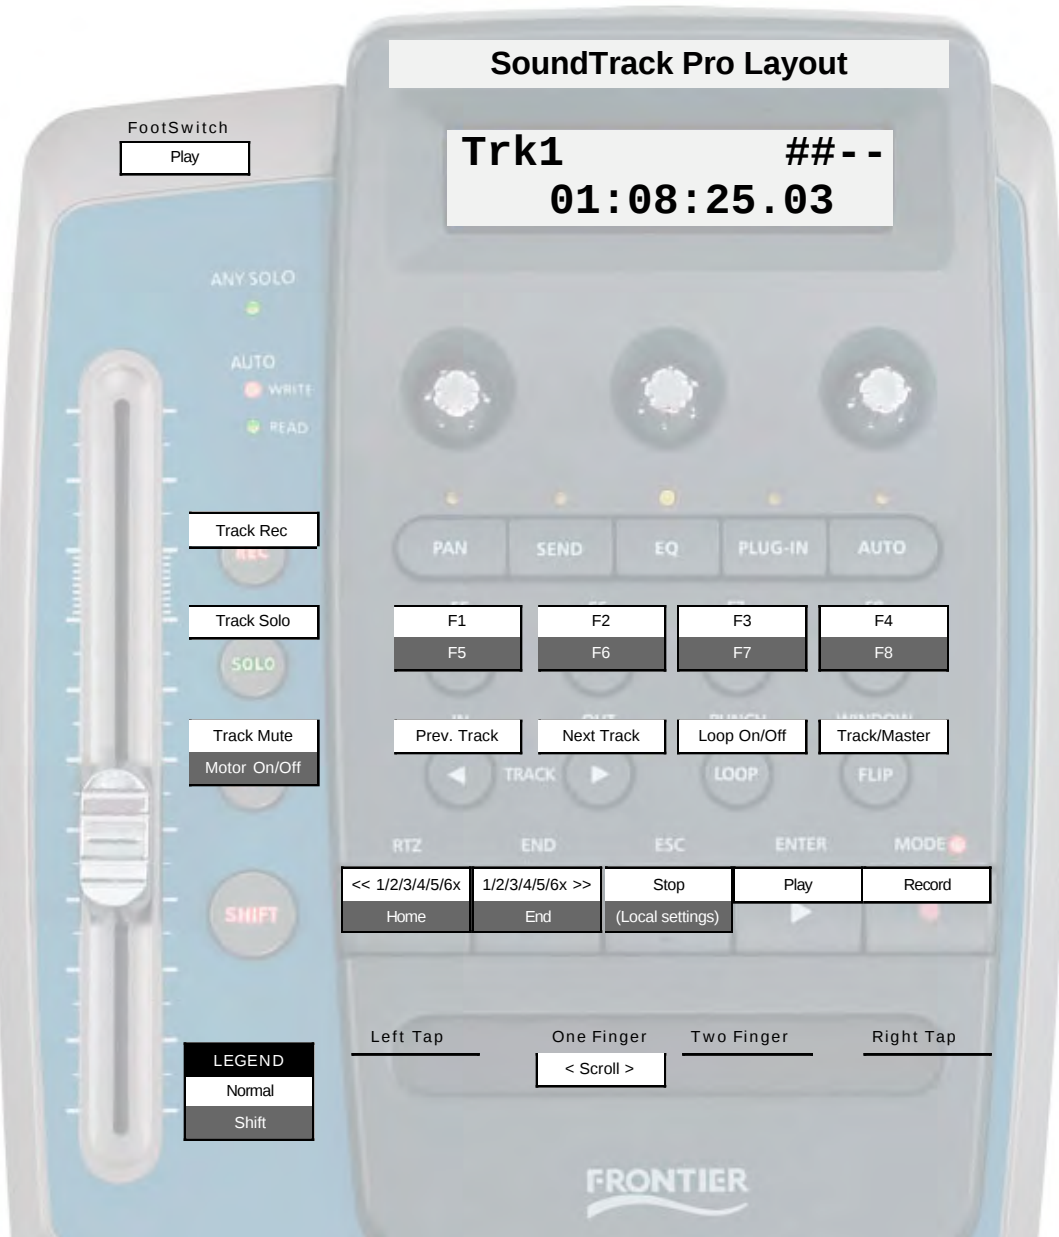

Pan Mode			
	+/- Track	Left/Right	Pan
Pushed	+/- Track	Up/Down	Fine Pan

Send Mode			
	+/- Track	Left/Right	Pan
Pushed	+/- Track	Up/Down	Fine Pan

EQ Mode			
	+/- Track	Left/Right	Pan
Pushed	+/- Track	Up/Down	Fine Pan

Plug-In Mode			
	+/- Track	Left/Right	Pan
Pushed	+/- Track	Up/Down	Fine Pan

Auto Mode			
	+/- Track	Left/Right	Pan
Pushed	+/- Track	Up/Down	Fine Pan

Notes	
The three encoders always do the same actions. The 5 mode buttons do nothing. The F1-F4/F5-F8 and the middle encoder left/right/up/down behaviors are user-programmable. See the Soundtrack_Pro_and_AlphaTrack.pdf document for details.	